

GENERAL EMPLOYEE RADIATION TRAINING (GERT) FN000241

INTRODUCTION

All employees of Fermilab are required to complete General Employee Radiation Training. In addition, subcontractors and users who enter those areas at Fermilab that are posted as Controlled Areas, as part of their job but do not work with radioactive materials (including radioactive sources) must receive this training.

OBJECTIVES

DISCUSS the Fermilab Radiological Control Program in regard to radiological terminology, sources of radiation, biological effects, dose limits, ALARA, radiological controls, postings, employee responsibilities, and emergency situations.

- DEFINE the basic terminology used in radiological control.
- IDENTIFY natural background and manmade sources of radiation as well as sources of radiation at Fermilab.
- DIFFERENTIATE between non-ionizing and ionizing radiation.
- RECITE the potential biological effects from ionizing radiation.
- REMEMBER the whole body radiation exposure limit for non-radiological workers and ALARA concept and principles.
- STATE the methods used to control radioactive material and employee responsibilities for the Radiological Control program.
- EXPLAIN what to do in case of a radiation emergency.

DEFINITIONS

There are certain terms that are unique to work with radiation. Some of these are defined below.

GENERAL EMPLOYEE - an individual who may routinely encounter radiological barriers, postings, and/or radioactive materials in the course of his/her assignment.

RADIOLOGICAL WORKER - an individual whose job assignment requires work on, with, or in the proximity of radiation producing machines or radioactive material and has the potential of being exposed to greater than 100 mrem each year. Same as a RADIATION WORKER.

RADIATION - energy emitted in the form of rays or particles from unstable atoms or accelerator beams.

RADIOACTIVE MATERIAL - any material, equipment, or system component that contains or has on its surface unstable nuclei.

RADIOACTIVITY - the natural and spontaneous process by which unstable nuclei emit or radiate excess energy.

RADIOACTIVE CONTAMINATION - radioactive material that is removable, loose, transferable, or in an unwanted place.

rad - a unit which quantifies the amount of energy deposited in matter by radiation.

rem - a unit used to quantify the amount of biological damage done to our bodies by ionizing radiation. However, because most doses are so small, they are usually reported in thousandths of a rem, or millirem (mrem).

RADIATION TYPES & SOURCES OF RADIATION

People have always been exposed to radiation. We are exposed to it from sources in our environment and even from sources inside our bodies.

The average annual radiation dose from both natural background and manmade sources of radiation to a member of the general population is about 620 mrem/year.


Natural background radiation comprises half of public radiation doses. The main sources are:

- cosmic radiation or the radiation from the sun and outer space
- radon inside buildings
- terrestrial radiation or the radiation from the material in the earth's crust such as rocks and soil
- internal radiation from material present in our bodies such as potassium-40

Manmade sources of radiation contribute the remainder of the annual average dose and include:

- medical uses such as diagnostic x-rays and nuclear medicine
- consumer products such as smoke detectors, lantern mantles, and smoking products
- Other sources including fallout from weapons testing

Total Average Annual Background Radiation Dose from All Sources

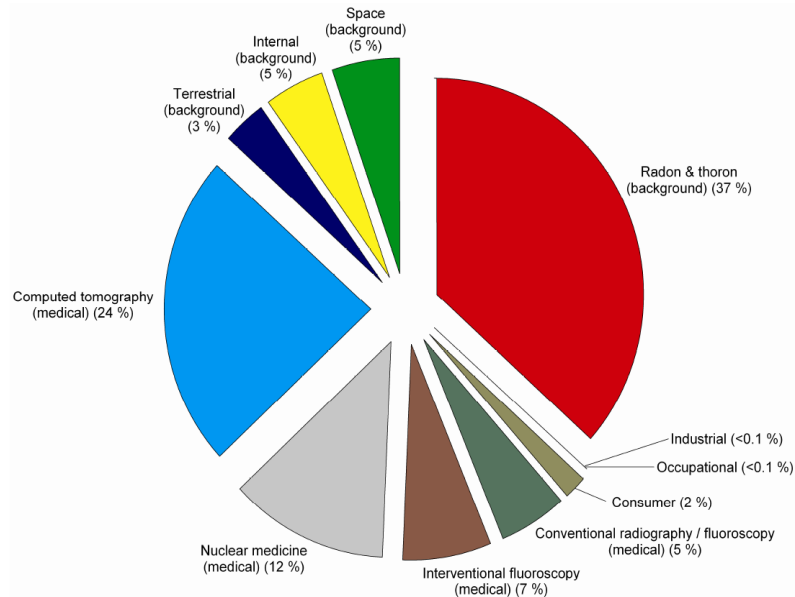

Because of the type of work that is done here, individuals who work at Fermilab may be exposed to additional sources of radiation.

The largest radiation dose would come from an accidental exposure to an operating beam inside the accelerator tunnel or other beamline enclosures. The chance of this happening is remote due to the safety hardware and procedures that are in use.

It is far more likely that the radiation dose you could receive is from low level sources, such as magnets and other materials which have been exposed to the accelerator beam and have become activated.

IONIZING AND NON-IONIZING RADIATION

Ionizing radiation has enough energy to remove electrons from an electrically neutral atom. This is the type of radiation of most concern and what is usually referred to when one speaks of radiation.

There are four basic types of ionizing radiation: alpha particles, beta particles, gamma/x-rays, and neutrons. Because of the unique nature of the work done at Fermilab, there may be other types of ionizing radiation present, such as that due to muons.

Non-ionizing radiation does not have enough energy to remove an electron from an electrically neutral atom. Even though it is capable of causing biological damage, it is not a major radiological concern.

Types of non-ionizing radiation include microwaves, radio waves, ultraviolet, and visible light.

BIOLOGICAL EFFECTS

Effects of radiation on biological systems depend on the total dose and the rate at which the dose is delivered.

Acute radiation dose refers to a large dose that is received over a short period of time such as radiation therapy for cancer treatment, whereas a chronic dose is a small amount of radiation received over long periods of time. Examples of chronic exposures are those from natural background, routine medical exposures, and work-related or occupational exposures.

Biological effects from chronic exposure may be observed in the exposed individual or in the future children of the exposed individual.

Genetic effects may appear in an exposed individual's children as a result of a dose to that person's reproductive cells prior to conception. Mutations in the chromosomes of the reproductive cells can be passed on to future generations.

A developing embryo/fetus is considered to be in the most radiosensitive stage of human development as the cells are rapidly dividing. Exposure of the embryo/fetus to radiation may increase the child's chances of impaired physical growth, slower mental development or childhood cancer. These risks are virtually eliminated by special protective measures for pregnant radiation workers.

Occupational exposures may slightly increase the risk for the development of cancer and/or cataracts.

DOSE LIMITS

The DOE and FERMILAB radiation dose limit for the general employee or non-radiological worker is 100 mrem/year. This is your limit unless you attend additional training.

ALARA

ALARA, As Low As Reasonably Achievable, is the concept at the base of any radiological control program. The ALARA concept can be defined as minimizing exposures, both on site and off site, to radiation and radioactive materials. There are three basic principles of radiation protection used to maintain exposures ALARA: time, distance, and shielding.

Time - Reduce the amount of time spent near a source of radiation.

Distance - Stay as far away from the source as possible.

Shielding - Place some type of shielding between you and the source.

In addition to the ALARA policy and program, the Fermilab has other radiation safety related policies:

1. Particle beams will not be accelerated without good reason.
2. No person will be exposed to radiation unnecessarily.
3. Beam losses will be limited so that the residual dose rate inside the beamline enclosures will safely permit maintenance.

RADIOLOGICAL CONTROLS

All areas or materials controlled for radiological purposes are identified by one or more of the following:

1. Signs that have the standard radiation symbol colored magenta or black on a yellow background posted at the entrance.

Standard Radiation Symbol



2. Yellow and magenta or black rope, tape, chains or other barriers are used to designate the boundaries of posted areas.
3. Labels are used to identify radioactive material.
4. Yellow plastic wrapping is used to package radioactive material.
5. Only designated areas are used to store radioactive material.
6. Protective clothing and equipment are used to protect personnel from contamination.

POSTINGS

Controlled Area



An area to which access is controlled to protect personnel exposure to radiation and/or radioactive material above natural background levels.

Radioactive Materials



An area where radioactive materials are used, stored, or handled.

Radiation Area



An area with dose rates between 5 mrem/hr and 100mrem/hr.

High Radiation Area



An area with dose rates >100 mrem/hr, but ≤ 500 rad/hr.

Other

Can designate areas with higher dose rates or contamination.

Fermilab also has a label classification system for radioactive materials. The greater the Class number on the label, the greater the level of radiation being emitted.

Note that an individual with GERT can enter a Controlled Area without an escort. In addition, the individual may enter an area solely posted as Radioactive Materials provided that he/she does not handle any radioactive materials.

EMPLOYEE RESPONSIBILITIES

All employees have an impact on maintaining exposures to radiation and radioactive material ALARA.

Some of the general employee responsibilities are listed.

1. Obey all signs/postings.
2. Comply with all radiological and safety rules.
3. Do not enter radiological areas for which you have not had the appropriate training without an escort. If being escorted:
 - obey the instructions of your escort;
 - obtain and properly wear any dosimetry; and
4. Be alert for and report unusual radiological situations.
5. Know where and/or how to contact Radiological Control personnel in your work area.

6. Comply with emergency procedures for your work area.
7. Keep exposures to radiation and radioactive materials ALARA.

EMERGENCY SITUATIONS

A radiation emergency is any situation involving radiation which places or may place in jeopardy human life, health, or safety or valuable property.

Examples are:

1. fires in radiation areas.
2. a leaking container in a radiation area.
3. a transportation accident involving radioactive material.

Responsibility for reporting the emergency initially rests with the person who discovers it.

If you discover what you think may be an emergency of any kind:

- Call X3131.
- Remain on the scene.
- Keep others from entering the hazardous area.

SUMMARY

As an employee, it is important to be informed of the radiological hazards at Fermilab. Workers need to be able to identify hazards and take appropriate protective measures. Through an enhanced awareness and a sense of personal responsibility and ownership, each employee can contribute to safe ALARA practices.

Should you have any questions regarding the material in this handout, please ask your supervisor or contact your assigned Radiation Safety Officer (RSO) or an ES&H Section Radiation Physics staff member.