



Geant 4



Neutrino Detector Simulation Chain

Robert Hatcher
Fermilab Computing Division

2012-02-20




Geant 4



General Notes on Simulations



- The simulation is a chain or series of steps each modeling a specific physical process
- Robert's Law of Simulations:
 - The MC is only as good as the weakest link in the chain; factorize them to make them tractable problems
- Kregg Arms' Rules of Monte Carlo Fight Club:
 1. The Monte Carlo is always wrong
 2. The Monte Carlo is ALWAYS wrong
 3. The Monte Carlo is always the best we have at the time
 4. ~~Only two guys to a fight~~
 5. ~~One fight at a time~~
 6. The analysis groups are collectively the only customer of the Monte Carlo group
 7. The Customer is always right

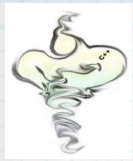

Geant 4



General Notes on Simulations



- The simulation is a chain or series of steps each modeling a specific physical process

- Robert's Law of Simulations:

- The MC is only as good as the weakest link
 - Factorize them to make them tractable

- Kregg Arms' Rules of Monte Carlo

1. The Monte Carlo is always wrong
2. The Monte Carlo is ALWAYS wrong
3. The Monte Carlo is always the best we have at the time
4. ~~Only two guys to a fight~~
5. ~~One fight at a time~~
6. The analysis groups are collectively the only customer of the Monte Carlo group
7. The Customer is always right

The trick is to know what needs improvement and what is feasible given the constraints of knowledge of the systems being modeled, people to develop the models and the available compute resources



Geant 4



General Notes on Simulations



- The simulation is a chain or series of steps each modeling a specific physical process
- Robert's Law of Simulations:
 - The MC is only as good as the weakest link in the chain; factorize them to make them tractable problems
- Kregg Arms' Rules of Monte Carlo Fight Club:
 1. The Monte Carlo is always wrong
 2. The Monte Carlo is ALWAYS wrong
 3. The Monte Carlo is always the best we have at the time
 4. ~~Only two guys to a fight~~
 5. ~~One fight at a time~~
 6. The analysis groups are collectively the only customer of the Monte Carlo group
 7. The Customer is always right



General Steps



Geant4

simulation step

software

work product



Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE

or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)
MCTruth hold a vector<MCParticle>

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics

ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



Beamline Simulation



Geant4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE

or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)
MCTruth hold a vector<MCParticle>

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics

ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms


Beam Simulation (Flugg)



Geant 4



- Is it “fl-ugh” or “floog”?
- Geant4 geometry (C++) + Fluka interactions (fortran)
 - G4 geometry is quite detailed (and good match to as-built)
 - fluka interactions everywhere (not just target)
- Record decay, initial secondary production and initial proton info
 - initial protons have some position and angular distribution
 - 2ndary production models are active areas of study
- Uses importance weights and thresholds
 - $w_{\pi} = \min(\max(30/p_{\text{tot}}, 1) * w_{\text{parent}}, 100)$
 - threshold = 1 GeV or not (off-axis, i.e. NOvA)

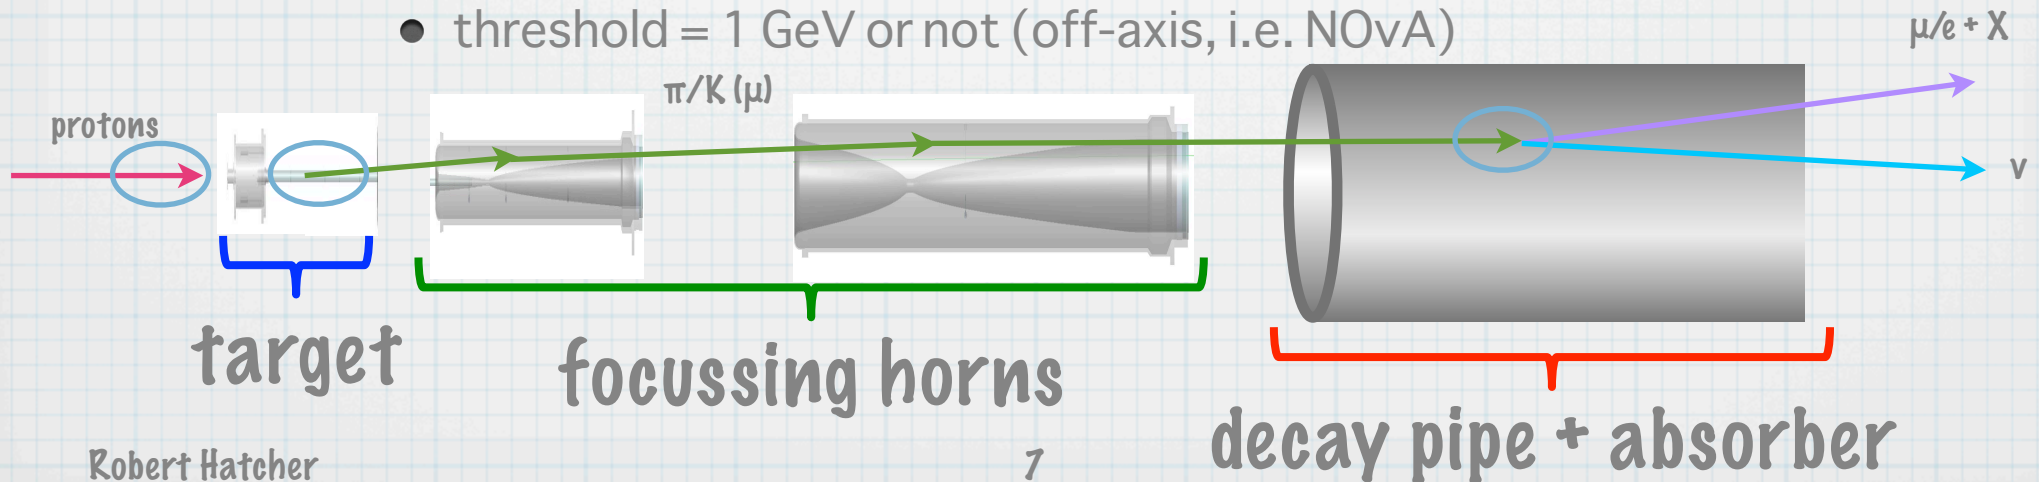




Geant 4



Decay Reweighting

- The probability that a decay results in a neutrino ray that goes through any point depends on the relativistic boost at the decay point; the ν energy will also depend on position
- Near and Far detectors subtend a different angular size \rightarrow they see different spectra

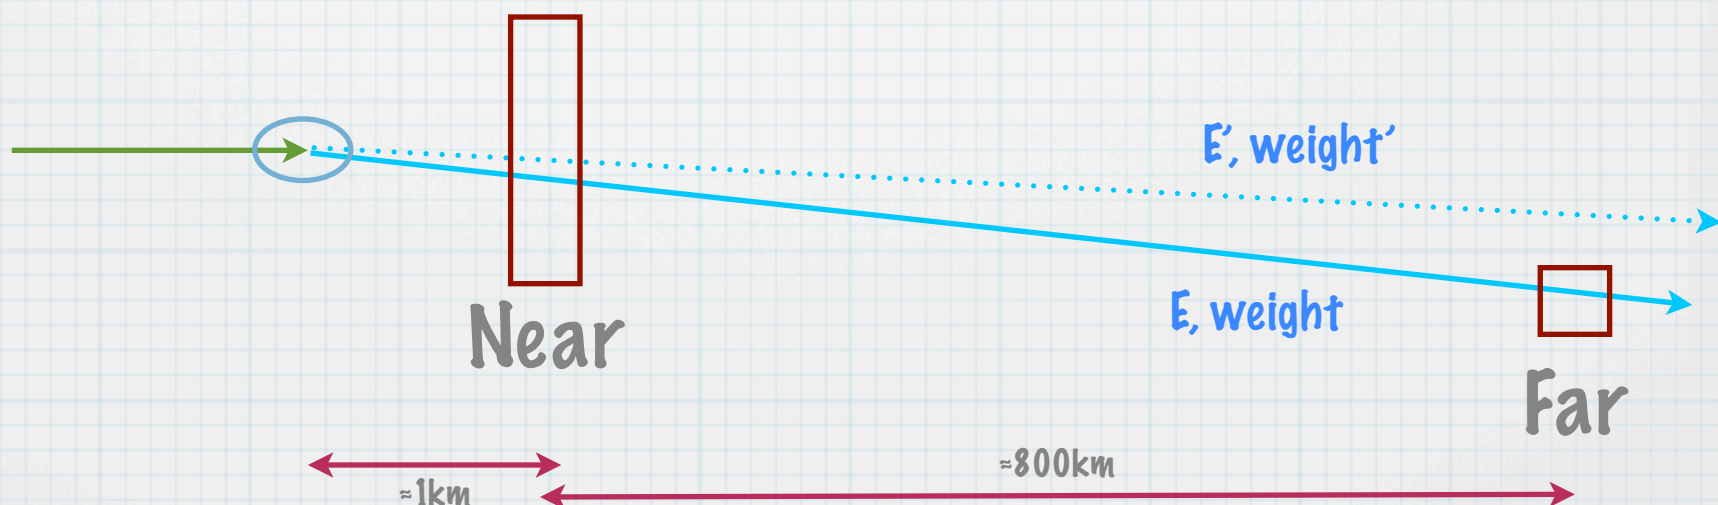




Geant 4



Flux Window



- A fictitious parallelogram in space from whence neutrino rays emanate
- needs to be sized:
 - large enough that all (to best approximation) relevant rays that might run through the geometry pass through the window
 - small enough to exclude rays that aren't of interest

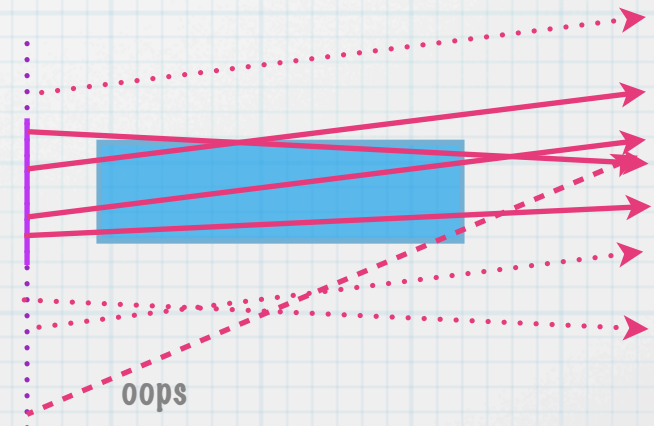




Geant 4





ν Spectrum (Near)

Flux

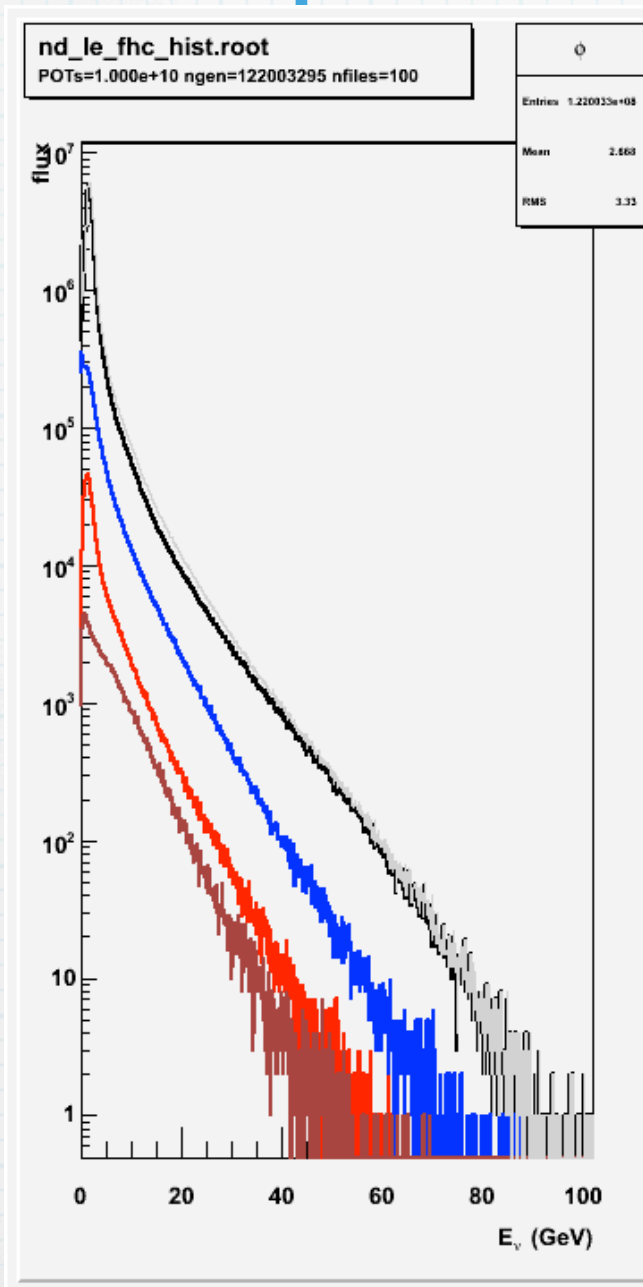

Flux $\times \sigma$

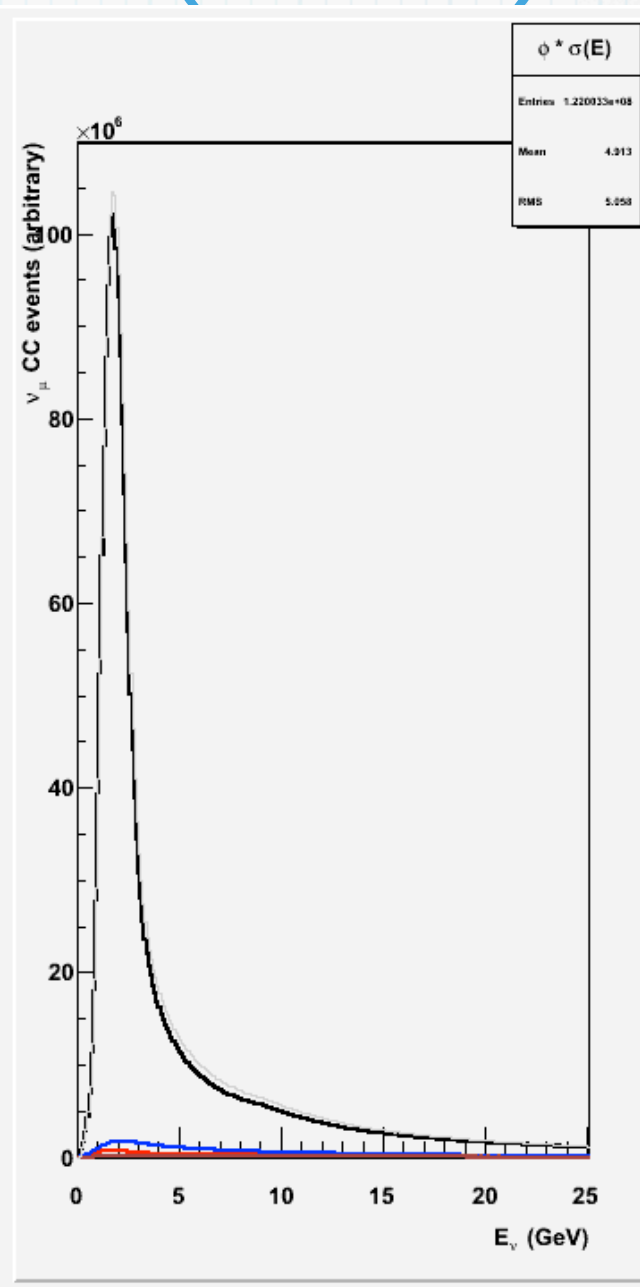


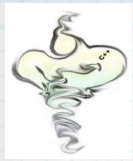

Geant 4



ν Spectrum (Far)

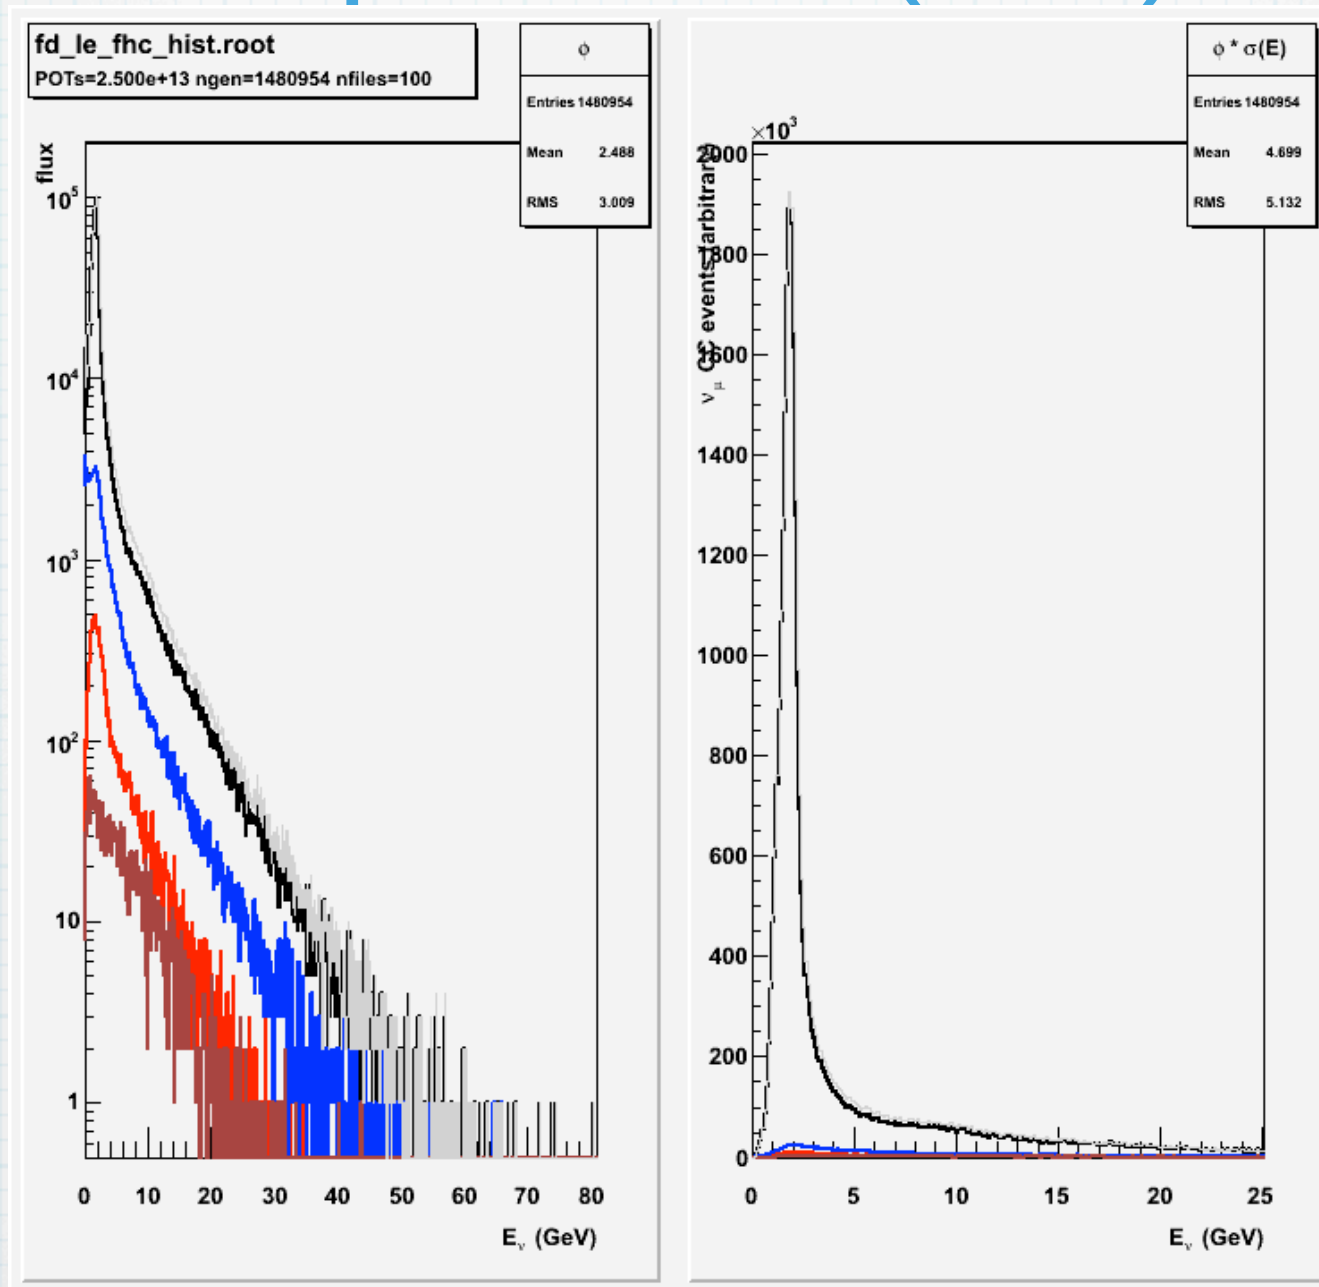




Geant 4



ν Spectrum (NDOS)

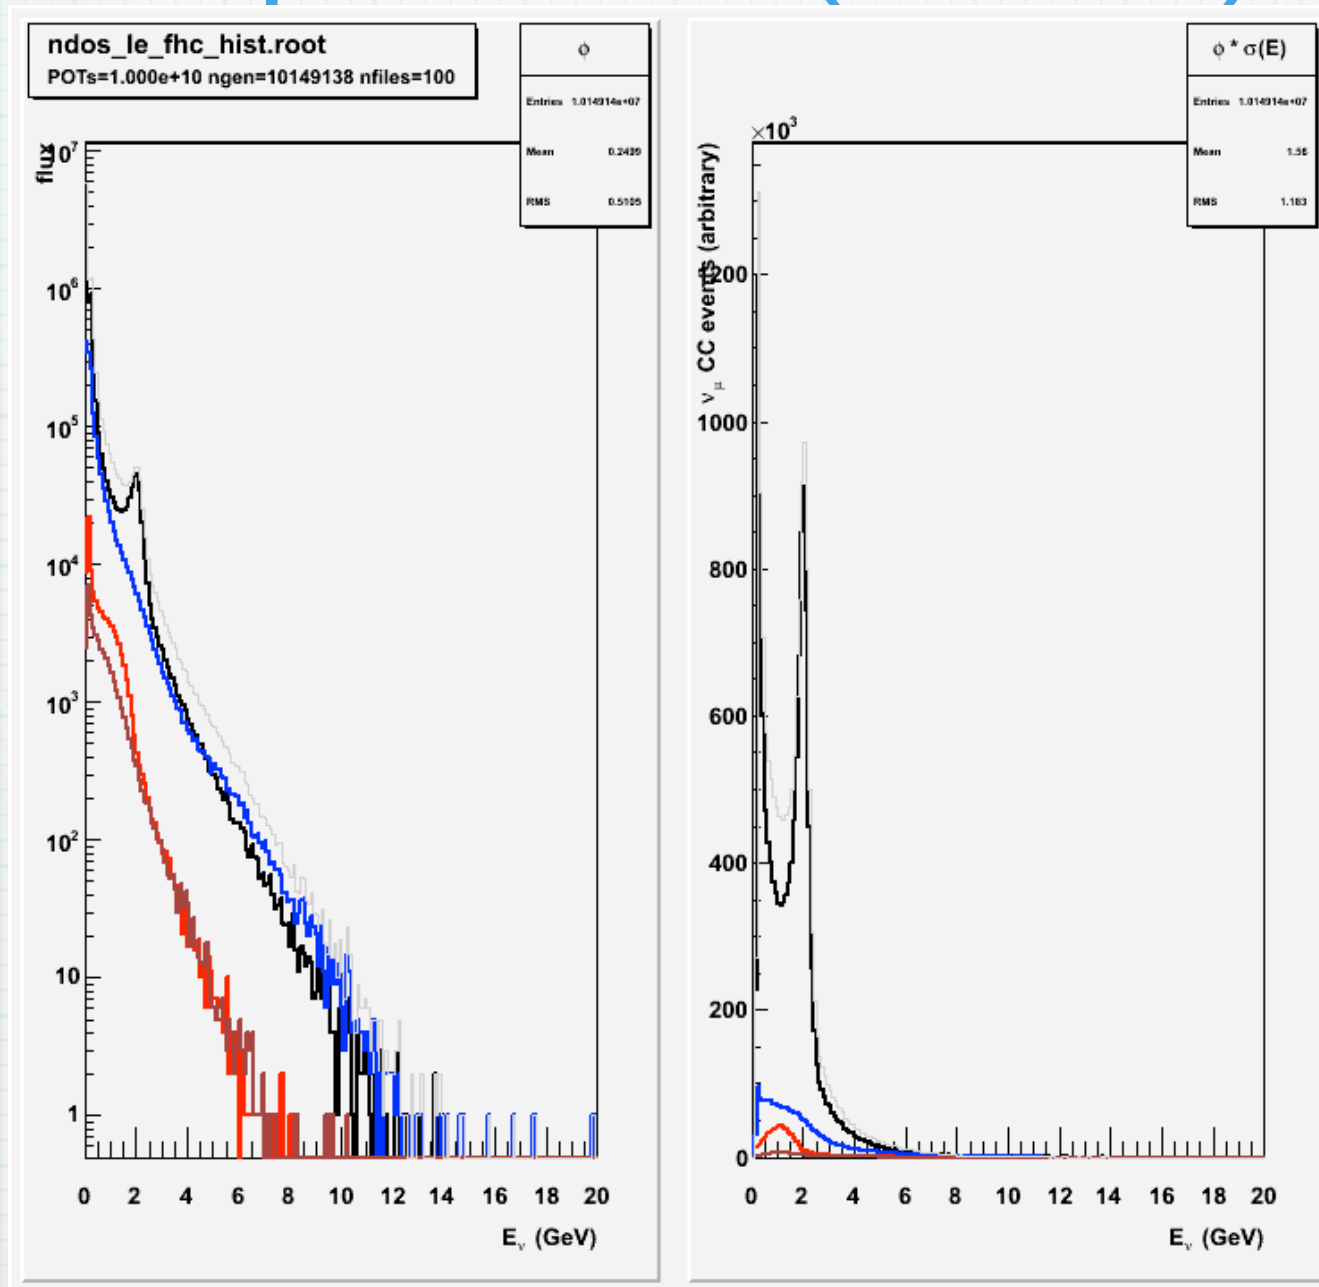



Beamline Simulation



Geant4

simulation step

software

work product



Beamline

flugg { fluka
Geant4 }

flugg.root

ν Interactions
or other “generator”

Flugg files are primarily (weighted) ntuple entries representing decays of hadrons (pions, kaons) and muons that result in a neutrino. For simple plotting they contain info for energies and weights of nu rays running through a fictitious detector center; for all but the far detector the energy and weight spectrum varies across the detector.

Energy Depositions

Light Propagation

DAQ Electronics

ReadoutSim

+
vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



Beamline Simulation



Geant4

simulation step

software

work product



Beamline

flugg { fluka
Geant4 }

flugg.root

ν Interactions
or other “generator”

Energy Depositions

Light Propagation


DAQ Electronics

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms

The information in the file must be re-evaluated to sample the “flux window”. Think of neutrino rays passing through the window and intersecting the geometry. The window placement and orientation relative to the beam system is specific for each detector. The window must be of sufficient size to encompass all rays that might intersect the detector.

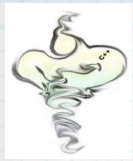

Beamline Simulation



Geant 4

simulation step

software

work product



Beamline

flugg { fluka
Geant4 }

flugg.root

ν Interactions
or other “generator”

Energy Depositions

Light Propagation

DAQ Electronics

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms

Turn decays into (neutrino) rays.

Additional information is carried from the flux ntuple downstream in the chain to allow flux re-weighting of the original hadron production physics (cf. SKZP).



Beamline Simulation



Geant 4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE
or CRY/SingleParticle

+ v<MCTruth>,v<MCFlux>
(RunData, POTSum)
MCTruth hold a vector<MCParticle>

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics

ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



Geant 4



“Flux” ntuples

- Retain decay info which allows one to
 - re-evaluate for new detector positions
 - correctly correlate energy, position, direction
- Similar ntuple format used for pure Geant4 (and geant3) simulations of beamline
 - g4numi uses (almost?) same geometry as flugg
 - GENIE can read all 3 formats
- Carry 2ndary production info for reweighting
 - HARP, SPY, MIPP, NA49, NA61/SHINE
 - none quite matches E , p_t , p_z of Main Injector/NuMI



Geant 4

GNuMIFlux/GSimpleNtpFlux




- GENIE's GNuMIFlux

- read an entry
- pick random point on flux window (x,y,z)
- calculate x-y weight, energy, p4
- accept/reject based on weights ($wgt_{x-y} * wgt_{importance}$)
- (possibly) push backwards along ray to (x',y',z0)
- ⇒ PathSegmentList created from this ray
- cycling back to same entry won't give same ray
 - different window point ⇒ different weight, energy, trajectory

- GENIE GSimpleNtpFlux

- simple ntuple format of flavor, position, direction, weight
 - provision for carrying extra info to allow hadron reweighting
- some file level meta data (window position, total protons,...)

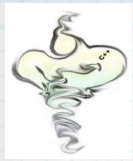

Geant 4



Flux Validation



- Hard ... nothing directly measures flux
- Ongoing effort to compare secondaries w/ experiment as proxy for flux
- Comparison of alternatives
 - flugg vs. geant4 vs. geant3
- Possibilities for future test suites:
 - validation of coordinate transform + boost
 - ...



Beamline Simulation



Geant 4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

ν Interactions
or other “generator”

GENIE's GNUMIFlux class interprets flugg (and similar) files, performing the sampling over a window for a given detector location relative to the beam. This can be computationally expensive, so it makes sense to do it separately and save the results.

Energy Depositions

Light Propagation

DAQ Electronics

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



Enter the ART Framework



Geant4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE
or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)
MCTruth hold a vector<MCParticle>

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics

ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode


Clusters, Prongs, Tracks
+ histograms




Geant4



Enter the ART Framework

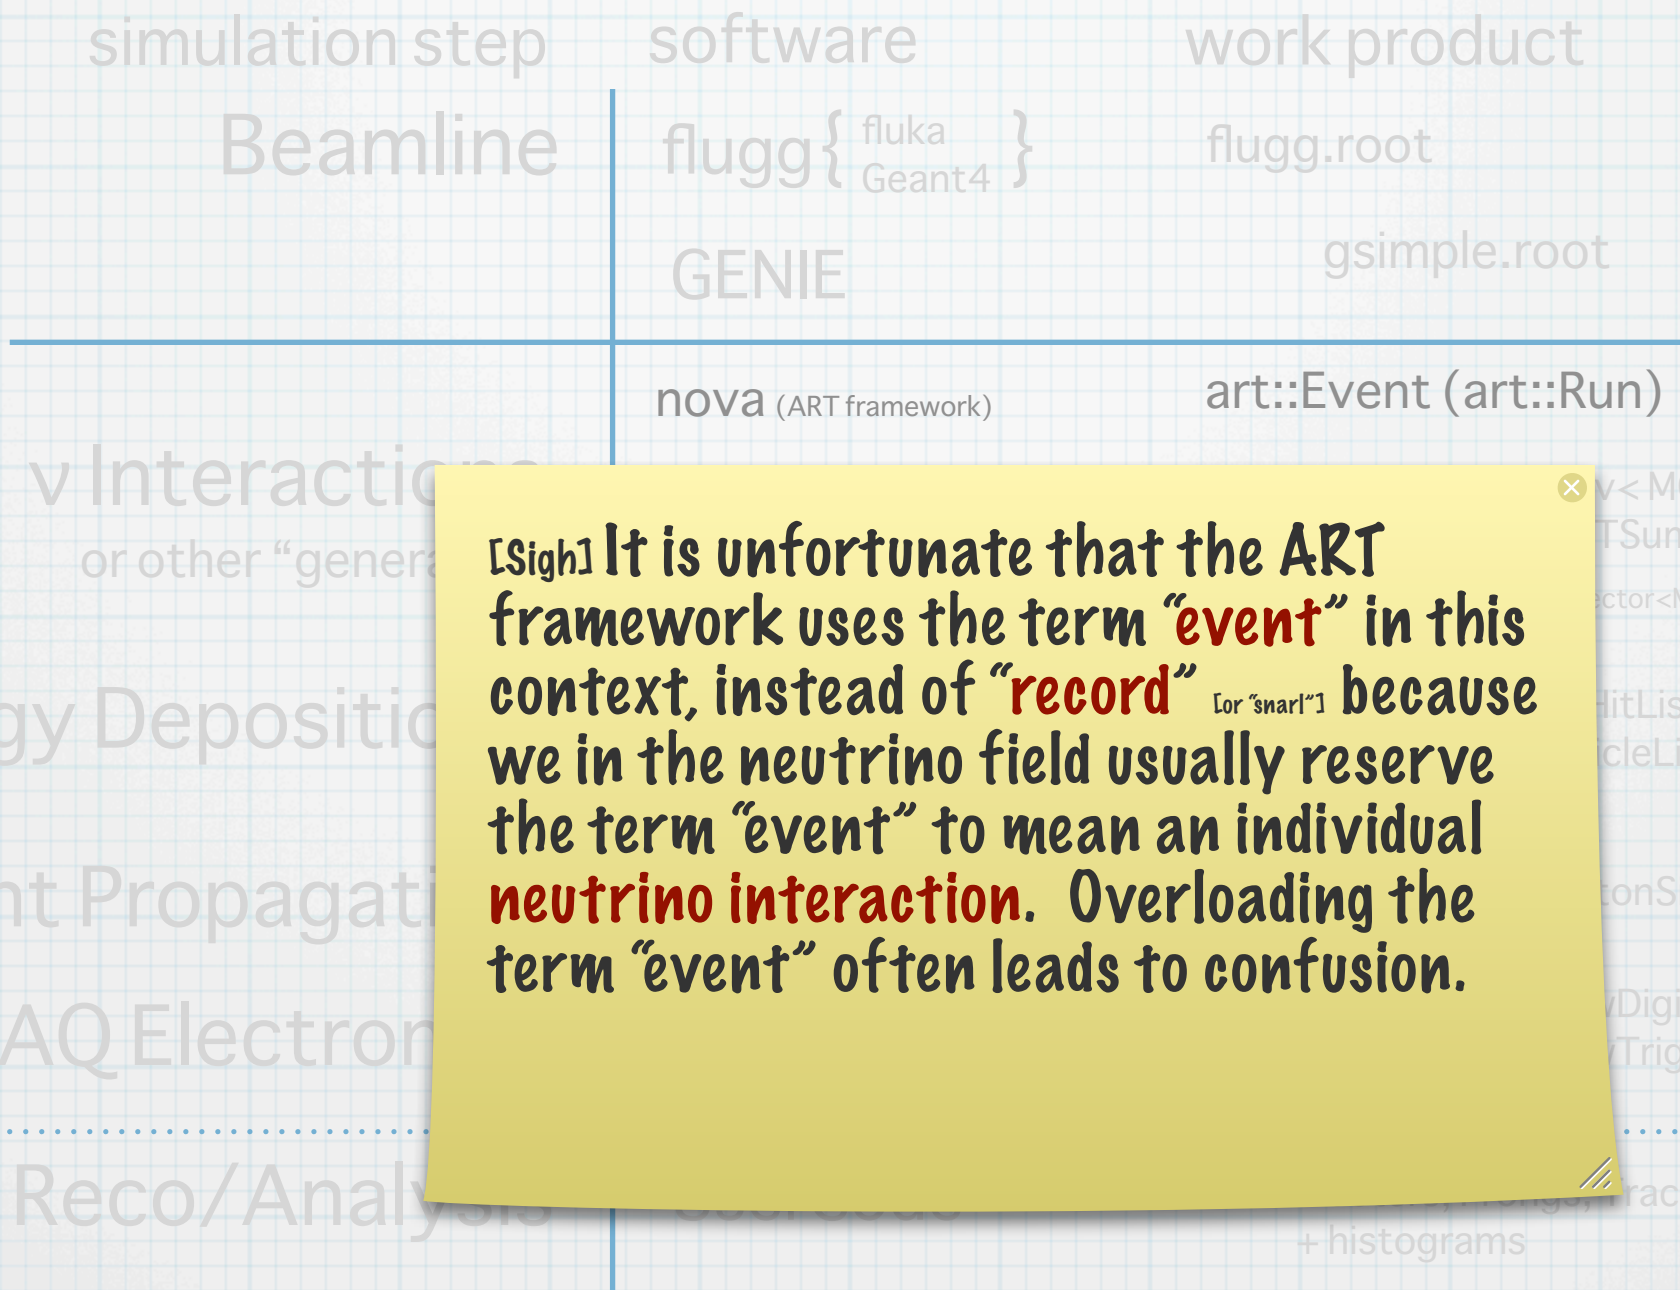

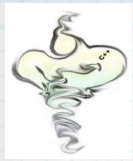

Neutrino Physics



Geant 4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

ν Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE
or CRY/SingleParticle

+ ν <MCTruth>, ν <MCFlux>
(RunData, POTSum)
MCTruth hold a vector<MCParticle>

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics

ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



Neutrino Physics



Geant4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

ν Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE
or CRY/SingleParticle

+ ν <MCTruth>, ν <MCFlux>
(RunData, POTSum)

MCTruth hold a vector<MCParticle>

GENIE brings together an external flux, a user supplied ROOT geometry and its knowledge about neutrino cross sections to determine if individual neutrino rays pulled from the flux interact in the geometry. If they do, then it chooses a vertex location and the kinematics of the interaction (QE/resonance/DIS/etc,x,y...).



Neutrino Physics



Geant 4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

ν Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE
or CRY/SingleParticle

+ ν <MCTruth>, ν <MCFlux>
(RunData, POTSum)

MCTruth hold a vector<MCParticle>

Given an initial state in the nuclear environment, GENIE also propagates particles out of that nucleus (undergo internuclear scattering and absorption). This results in a list of target / probe (ν) particles, intermediate states and final state particles.



Neutrino Physics



Geant 4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

ν Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE
or CRY/SingleParticle

+ $\nu<MC\text{Truth}>, \nu<MC\text{Flux}>$
(RunData, POTSum)
MCTruth hold a vector<MCParticle>

GENIEHelper (NOvA, LAr) handles doing overlays (multiple interactions w/ offset times) and filling the ART record. It also copies the flux info to the ART record.


GENIE can also “mix” neutrino flavors from the flux generator.



Geant4



ν Rays and Geometry

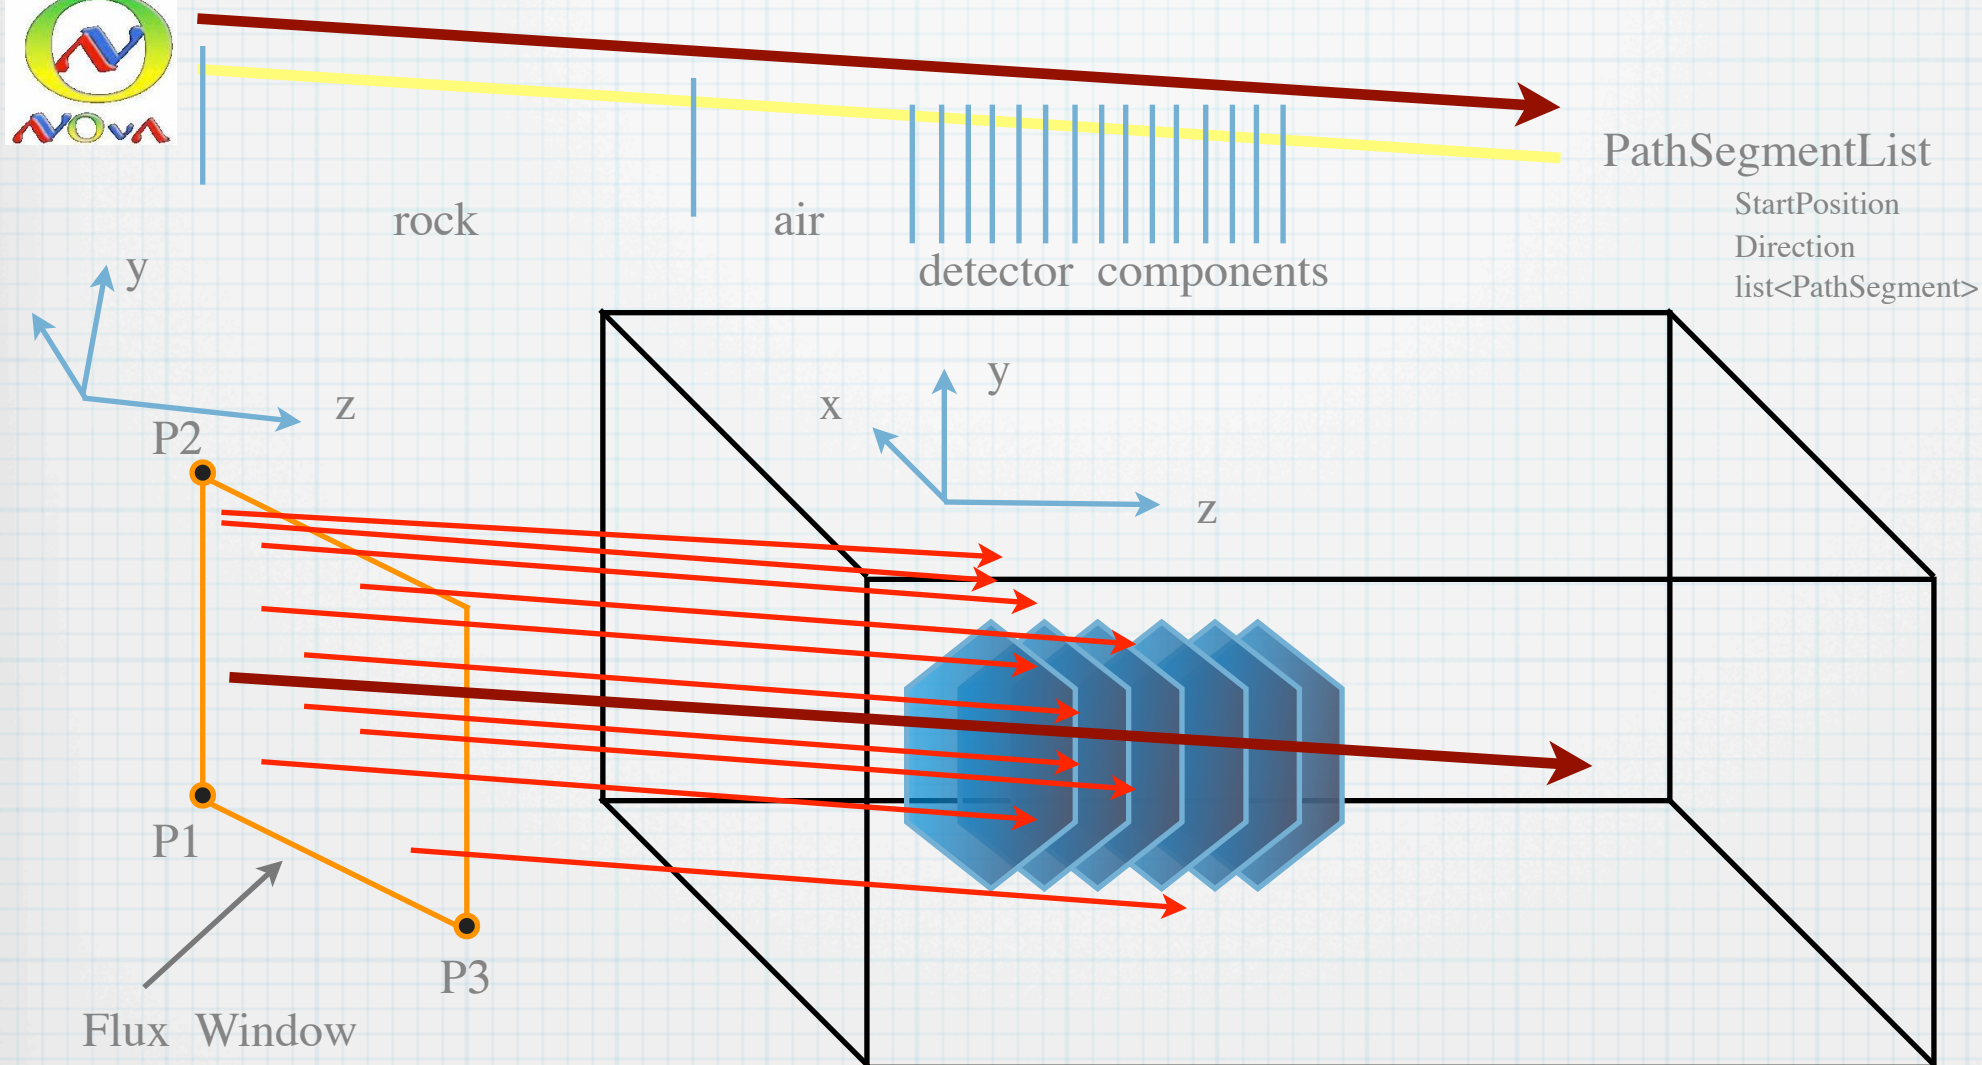



Geant 4



PathSegments

- components: dist from ray start; step length; volume; medium; material; global position for entrance and exit
- Used to determine probability of interaction in segments and then choice of vertex position



Geant 4



Geometry Analyzer



- Uses ROOT geometry
 - that's what experiments generally use in their offline reconstruction (G4 linkage is looked on askance)
 - has the necessary straight-line “transportation”
 - all that is needed is volume enter/exit point along v ray
- NOvA: some discussion about validating
 - cross check ROOT vs. G4 vs. simple by-hand cases
 - partly to validate GDML → ROOT / G4 representation




Geant 4



GENIE x-sections

- GENIE cross-sections: ~440 MB (1 5574 splines)
 - 271 for proton, 301 for neutron, 577 for each of 26 nuclei
 - currently need only ~14 of 26: C^{12} , N^{14} , O^{16} , Na^{23} , Al^{27} , Si^{28} , S^{32} , Cl^{35} , Ar^{40} , K^{39} , Ca^{40} , Ti^{48} , Fe^{56} , Ba^{137}
 - not: Mg^{24} , P^{31} , V^{51} , Mn^{55} , Fe^{54} , Fe^{57} , Fe^{58} , Ni^{59} , Cu^{64} , Sn^{119} , Pb^{207}
 - 500 knots, [0:200] GeV spaced logarithmically
 - 5% of points > 120; ND/FD MN flux has entries up to 104 GeV
 - could study effect of fewer knots
 - Loading from ROOT file (vs XML) speeds up loading, but doesn't appear to significantly change peak memory usage
- Study: # knots in spline vs. accuracy

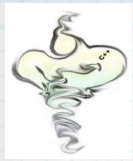

Geant 4



X-Section Validation



- GENIE collaboration has collected together extensive set of measurements
 - can compare to other neutrino and electron scattering experiments
 - total σ related to F_1 and xF_2 , ultimately to parton distribution functions
 - some exclusive processes are theoretically better understood and thus can be a standard candle with single adjustable parameter (M_A in QE)
- MINOS/NOvA use 2 detectors to minimize effects of flux and x-section uncertainty



Geant 4



Internuclear Scattering



- Steve Dytman primary developer
 - ?data




Geant 4

Detector Environment



- MINOS Near Hall model is not very accurate
 - ...just a rectangular box
 - (side note: Minerva flux window is too small -- see 3D representation)

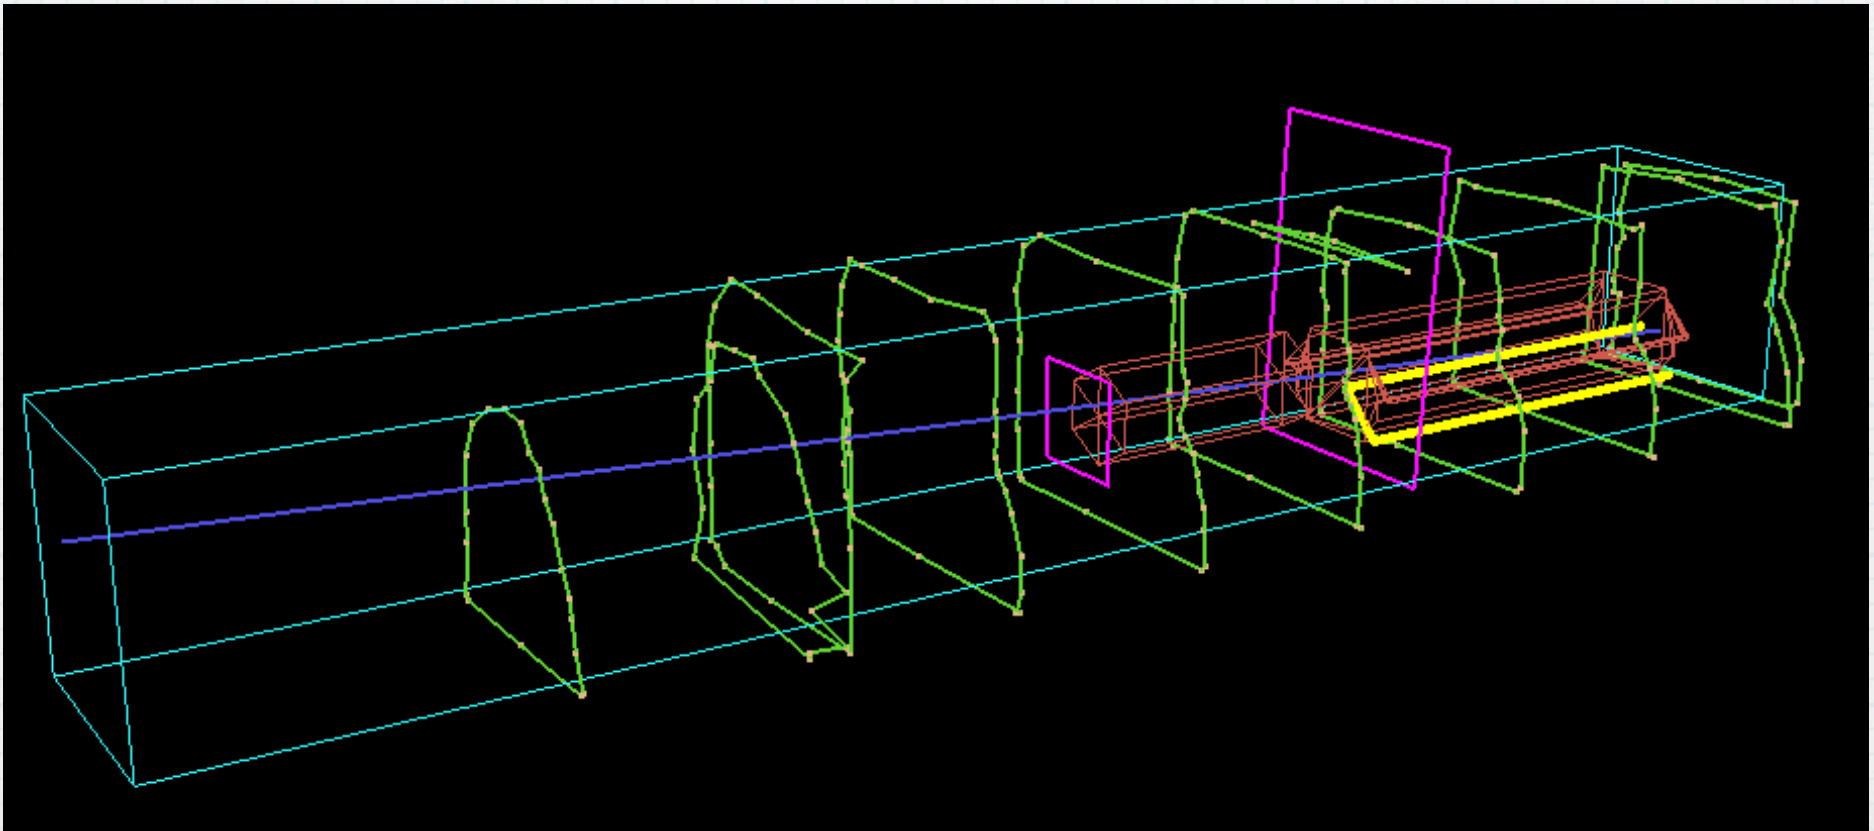

 GMINOS "hall"  survey measurements  detector  flux window  beam centerline




Geant4 Choosing a Vertex “Outside the Box”




- When a “topvol” isn’t set, GENIE considers the entire geometry
- GeomSelectorRockBox trims the volume to the hall + minimum safety + a size proportional to the neutrino energy
- Partially integrated into GENIEHelper, but not fully tested


No GeomSelector

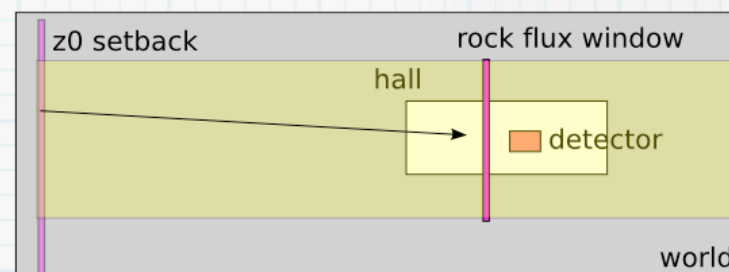


RockBox: 2 GeV

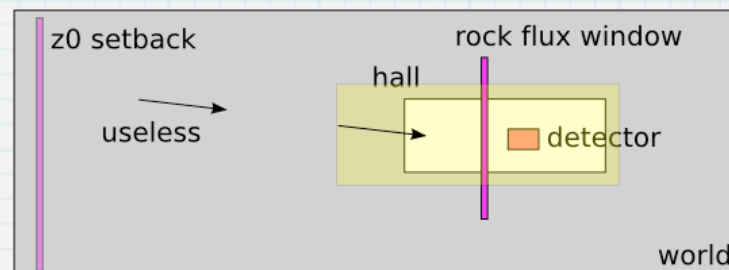

RockBox: 80 GeV

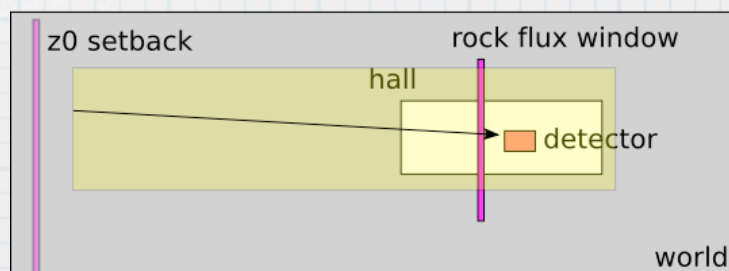

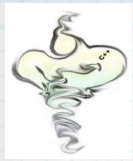


Geant 4



How to overlay

- Collect events
 - MINOS: pull from input sample files
 - Poisson distribution - $n_{\text{DetPerSpill}} + n_{\text{RockPerSnarl}}$ for a given intensity
 - single use of detector events, randomize pulling from rock files (reuse, except once)
 - NOvA: generate events until used X POTs
- Distribute events in time over spill interval according to intensity profile
 - offset truth info times (StdHep/HepMC)
 - also offset corresponding hit times, if already propagated in GEANT
 - if combined particle list, adjust parentage indices
 - add any event kinematics/flux records to list for spill
 - good to have mechanism tying kin/flux to particle list

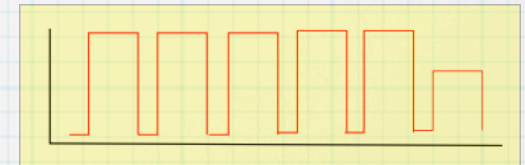



Shower & Track Physics



Geant4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE
or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)

MCTruth hold a vector<MCParticle>

final state only

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics

ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



Shower & Track Physics



Geant4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions

or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE

or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)

MCTruth hold a vector<MCParticle>

final state only

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propag

DAQ Electr

Reco/An

Geant4 propagates the final state particles through its representation of the geometry. It knows about the physics of energy loss, particle scattering, decays, etc.

“Hits” are true energy depositions.
FLS = Fiber in (Long, Liquid) Scintillator

Shower & Track Physics



Geant 4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE
or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)

MCTruth holds a vector<MCParticle>

final state only

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

The output ParticleList includes shower intermediates and such, e.g. Michel electron truth info.



Photonics



Geant4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE

or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)

MCTruth hold a vector<MCParticle>

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics

ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



Electronics



Geant4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE

or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)
MCTruth hold a vector<MCParticle>

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics

ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



End of Simulation



Geant 4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

GENIE

gsimple.root

v Interactions
or other “generator”

nova (ART framework)

art::Event (art::Run)

GENIE

or CRY/SingleParticle

+ v<MCTruth>, v<MCFlux>
(RunData, POTSum)
MCTruth hold a vector<MCParticle>

Energy Depositions

Geant4

+ vector<FLSHitList>
vector<ParticleList>

Light Propagation

Simple
PhotonTransport
^

+ vector<PhotonSignal>

DAQ Electronics


ReadoutSim

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms

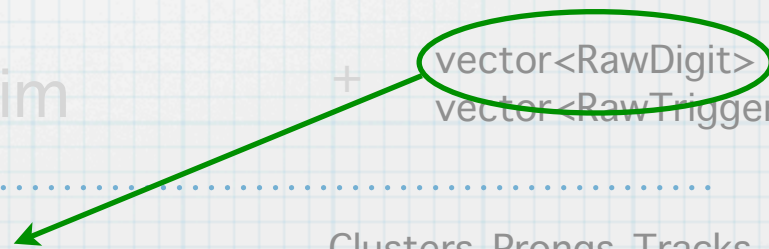



End of Simulation



Geant 4



simulation step

software

work product

Beamline

flugg { fluka
Geant4 }

flugg.root

gsimple.root

The goal of a simulation is to create "fake data" that mimics what the real detector would give, but includes truth information.

art::Event (art::Run)

+ v<MCTruth>,v<MCFlux>
(RunData,POTSum)
MCTruth hold a vector<MCParticle>

+ vector<FLSHitList>
vector<ParticleList>

+ vector<PhotonSignal>

+ vector<RawDigit>
vector<RawTrigger>

Reco/Analysis

UserCode

Clusters, Prongs, Tracks
+ histograms



Geant 4



Final Notes

- Many steps are computationally expensive
 - combinatorics are a bear (detectors, beams, mixing...)
 - wise to save and share common files
 - sometimes even (sensible) intermediate stages
 - if one is only interested in an early stage and files aren't available, then do only the necessary steps
 - if you're validating GENIE truth info and not using the hits or beyond, then only run through the generator stage.
- Make use of random seeds to “mix it up” without having to re-run earlier stages
 - especially the first GENIE ν interaction; reuse flux files
- As far as possible try to validate individual steps, not the whole chain at once